

8' x 8' Slant Leg Pop-Up Canopy Assembly Instructions



DESCRIPTION	MODEL #
8'x8' Slant Leg Pop-Up - Green	22972
8'x8' Slant Leg Pop-Up - Red	22978

RECOMMENDED TOOLS



Before you start: 2+ individual recommended for assembly, approximate time 15 min.

WARNINGS & CAUTIONS


WARNING

- Do NOT smoke or use open flame devices in or around this temporary portable shade product.
- Do NOT store flammable liquids (gasoline, kerosene, propane, barbeque grills, fire pits, deep fryers or smokers inside this product).
- Choose the set-up location of your portable shade product carefully. Check for overhead utility lines, trees, branches or other structures.

CAUTION

1. Please read instructions COMPLETELY before assembly. If you have questions, please call the consumer support number.
2. This product is classified as a temporary portable shade product and is intended to provide basic shade and protection from environmental elements, including the effects of sun, rain, tree sap, bird and animal excrement.
3. Proper anchoring is the RESPONSIBILITY OF THE OWNER. Any temporary portable shade product that is not anchored securely and properly has the potential to blow away in high winds. ShelterLogic cannot be held responsible for damage caused by any product that blows away.
4. THIS IS A SHADE PRODUCT AND NOT RECOMMENDED AS A PERMANENT STRUCTURE. IT IS NOT DESIGNED TO BE USED IN HIGH WINDS, SNOW OR ICE STORMS.

Step 1:

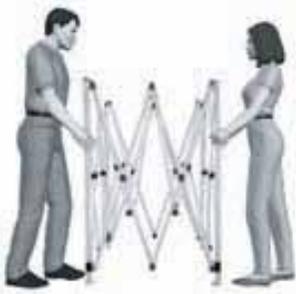

Remove assembly from portable, wheeled storage bag. Grab corner legs in each hand. Lift frame slightly off ground. Stepping backwards, pull frame apart until your arms are fully extended.

Step 2:




Unfold cover. Place cover over frame. Align corner pockets of cover over frame legs.


Step 3:



Do not place hands between frame tubes. Push up until canopy is fully opened.

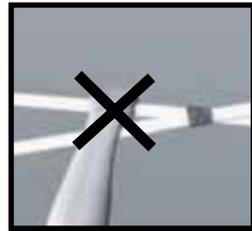

Step 4:

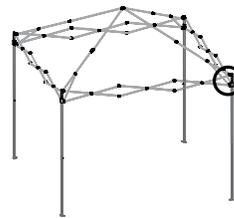

Slide corner brackets up until button snaps into place.


SHOWN WITHOUT COVER FOR CLARITY



Step 5:



Pull corners down snug, attaching hook and loop fasteners. Secure cover fasteners around top roof frame.

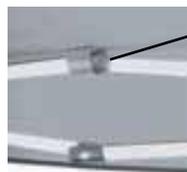


COVER FASTENER

Step 6:



Slide legs to desired height, making sure buttons snap into place.

Step 7:




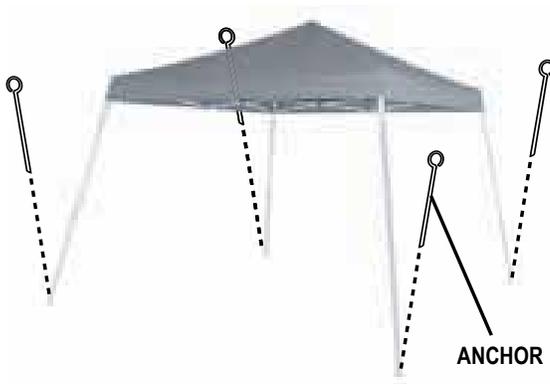


For temporary anchoring of canopy on grass, dirt or packed soil, insert temporary spike anchors through corner feet.

CAUTION: Temporary spike anchors are NOT designed for permanent installation. Never leave canopy unattended.

For assembly questions, Please call Customer Support: **1-800-524-9970** or in CANADA: **1-800-559-6175**

To Order Replacement Parts, Please Order by Part Number:

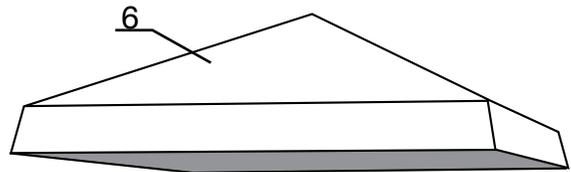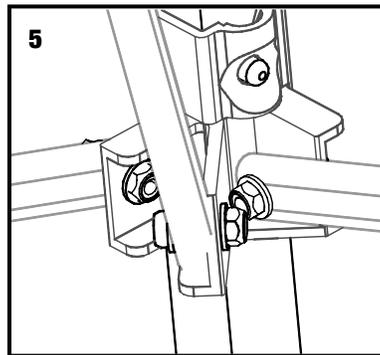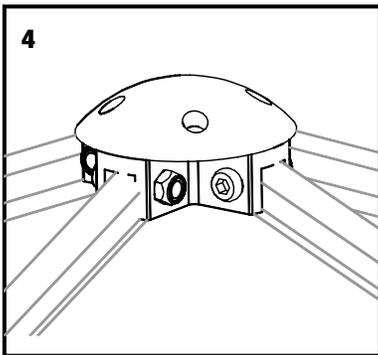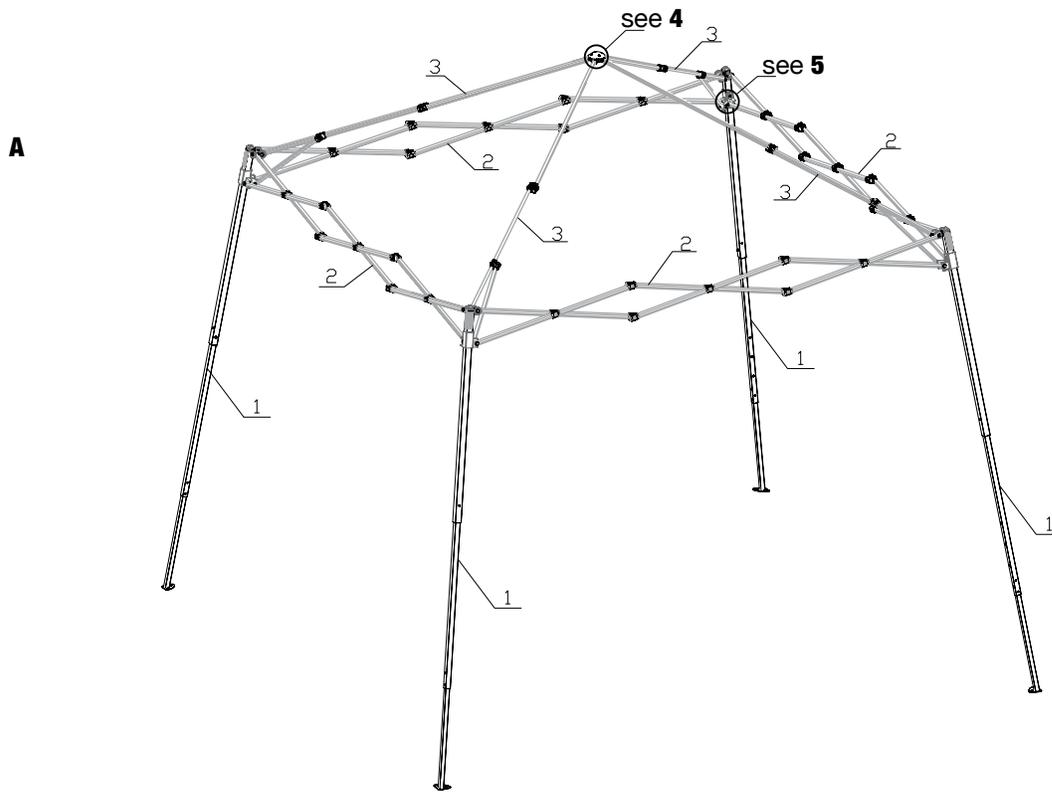

Part	Part Number	Description
1	15225	Leg Tube Assembly
2	15244	Gemel Assembly
3	15247	Slide Tube Assembly
4	22601	TOP CREST KIT
5	22602	SLIDING CONNECTOR KIT
6	15265	Replacement Cover - Red
6	800824	Replacement Cover - Green
not shown	15583	Replacement Carrying Bag